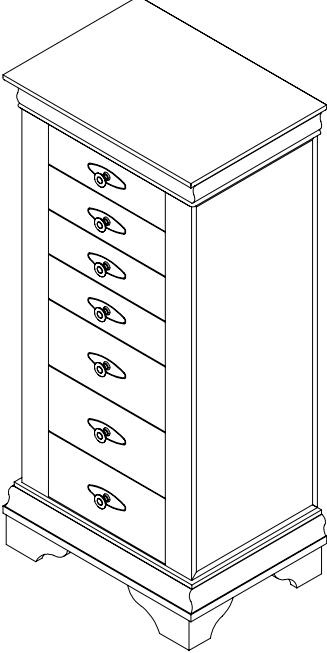




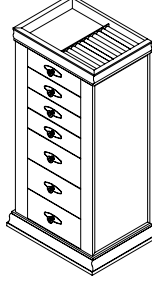




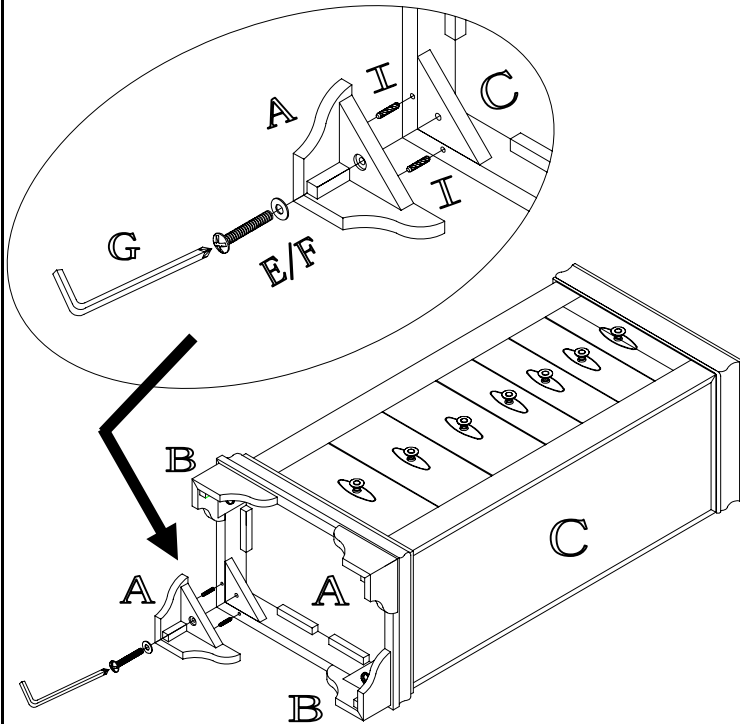


# ASSEMBLY INSTRUCTIONS FOR JEWELRY ARMOIRE

ITEM: #GH13023	NO.	Description	Q'ty	Sketch	NO.	Description	Q'ty	Sketch
	A	Right Front Leg Left Back Leg	2pcs		E	Machine Screw	4pcs	
	B	Left Front Leg Right Back Leg	2pcs		F	Washer	4pcs	
	C	Armoire	1pc		G	Screwdriver	1pcs	
					H	Small Wood Screw	5pcs	
	D	Top	1pc		I	Wood Dowel	8pcs	

1.Lie the Armoire (C) on a towel. Attach the 1 Right Front Leg and 1 Left Back Leg (A), and 1 Left Front Leg and 1 Right Back Leg(B) to the bottom of the Armoire (C) With 8 Machine Screws (E),8 Washers (F) and 8 Wood Dowel by using Screwdriver(G).



2.Carefully stand armoire upright on Legs , attached Top(D)to hinge at rear of the Armoire (C) with 5 Small Wood Screws (H) by using Screwdriver(G).

